



USB Power

chips: 5V@100mA,
use one USB-Port

boards: 5V@500mA,
use external Adapter

GND-Sense

Power Input with Sense

Zerocat Chipflasher

Flash free firmware, kick the Management Engine.
[git://zerocat.org/zerocat/projects/chipflasher](https://zerocat.org/zerocat/projects/chipflasher)

TITLE		
FILE:	testboard-page02.sch	REVISION: v2.0.2-0-4270742b1 (flashrom-interface)
PAGE	OF	DRAWN BY: kmx