


Note:
 DTE = Data Terminal Equipment (Laptop)
 DCE = Data Communication Equipment (Propeller)
 DTR = Data Terminal Ready (Laptop is ready to send/receive)

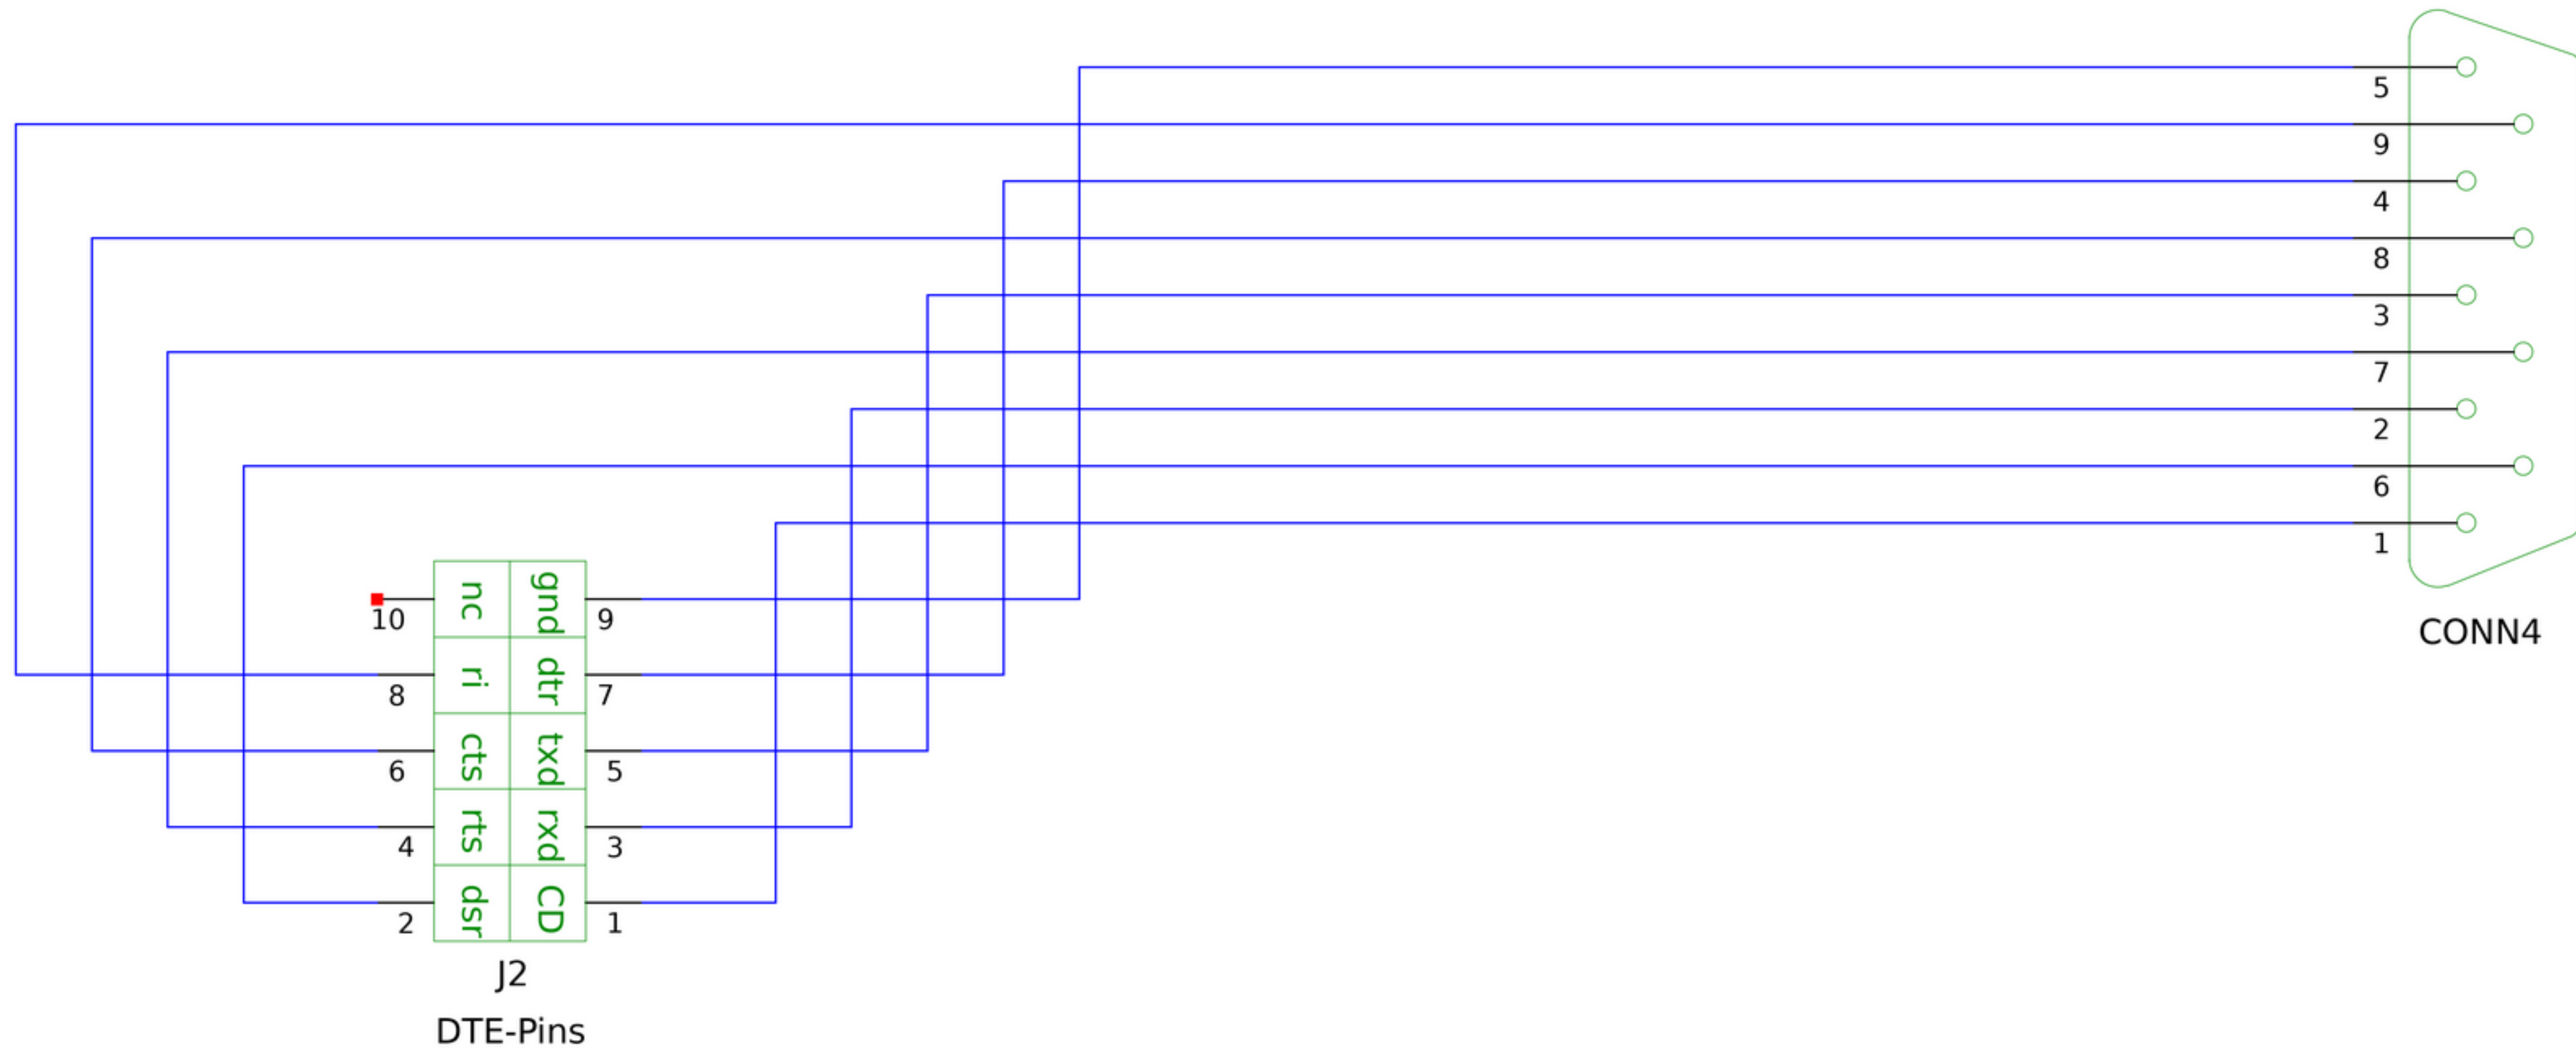

RS232 Cable

Zerocat Chipflasher

Flash free firmware, kick the Management Engine.
[git://zerocat.org/zerocat/projects/chipflasher](https://zerocat.org/zerocat/projects/chipflasher)

TITLE		
FILE:	testboard-page11.sch	REVISION: v2.0.2-0-4270742b1 (flashrom-interface)
PAGE	OF	DRAWN BY: kmx