Note:
DTE = Data Terminal Equipment (Laptop)
DCE = Data Communication Equipment (Propeller)
DTR = Data Terminal Ready (Laptop is ready to send/receive)

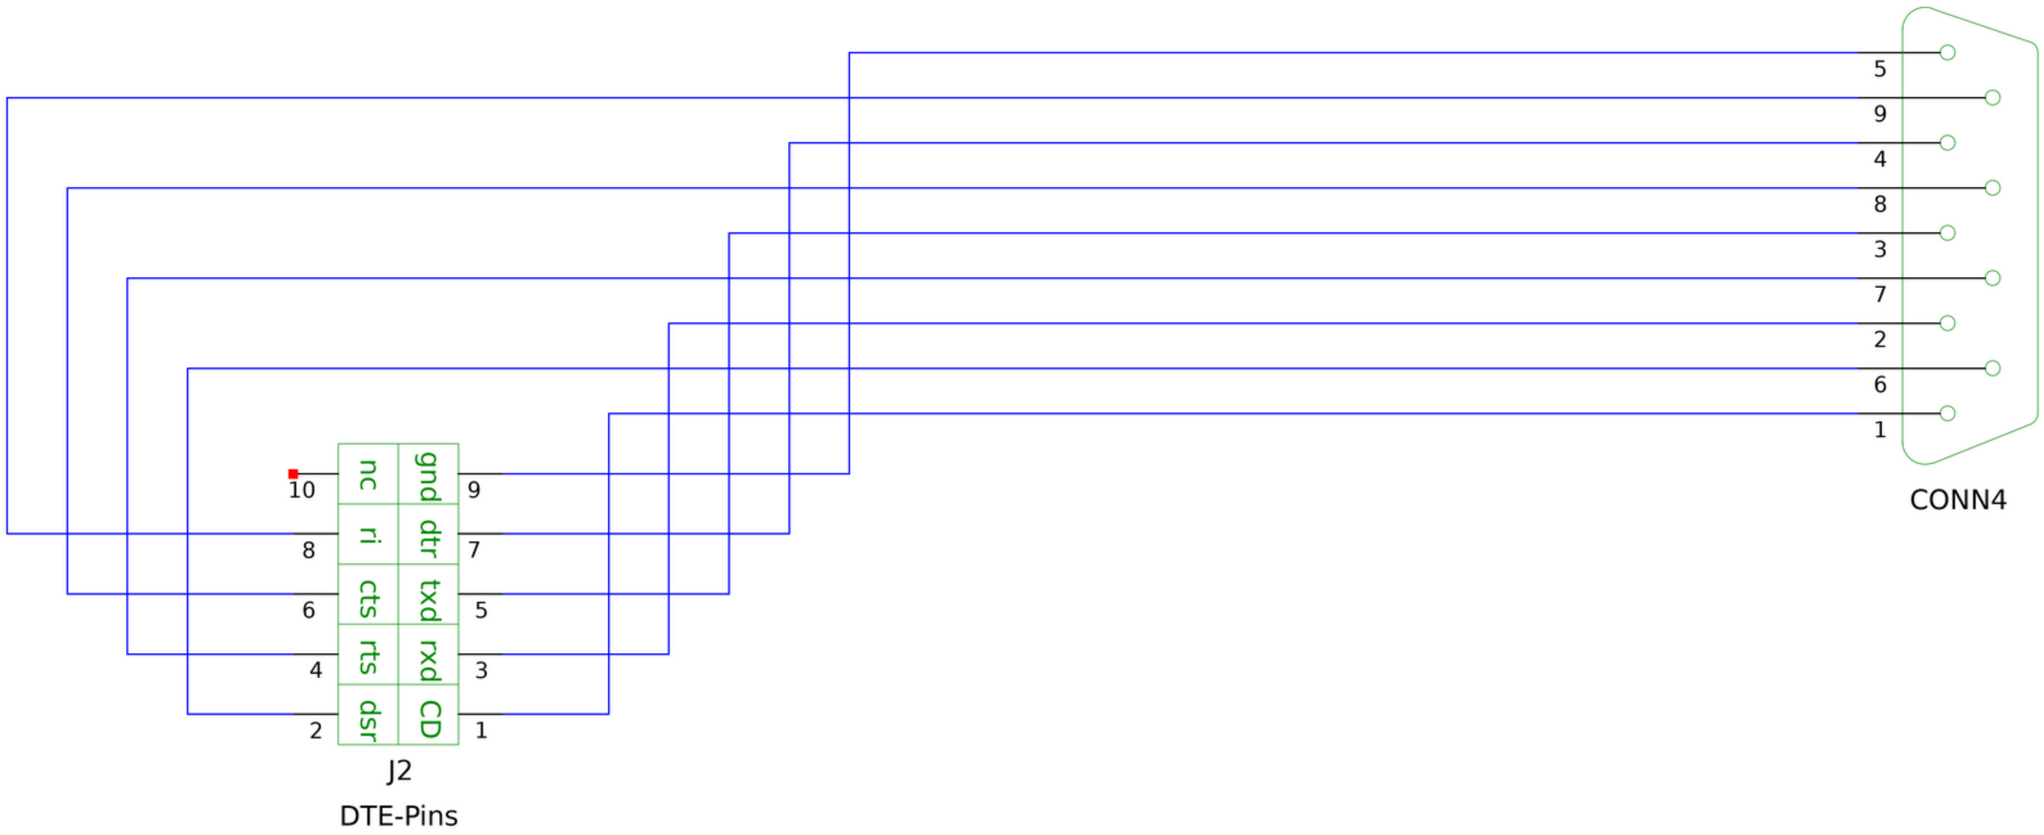

RS232 Cable		Zerocat Chipflasher Flash free firmware, kick the Management Engine.	
TITLE		git://zerocat.org/zerocat/projects/chipflasher	
FILE:	testboard-page11.sch	REVISION:	v2.0.2-0-4270742b1 (flashrom-interface)
PAGE	OF	DRAWN BY:	kmx